

# KBSOUND®

- ENG 1 USER'S MANUAL
- D 11 BENUTZERHANDBUCH
- F 21 MANUEL DE L'USUAIRE
- NL 31 GEBRUIKERSHANDLEIDING
- I 41 MAMANUALE DELL'UTENTE
- N 51 BRUKERHÅNDBOK



# eISSOUND

*It's Soundlife!*

## Important Safety Instructions

Before installing the unit, please read and follow the instructions provided in the Installation Manual included in this kit.

Before operating the unit, please read and follow the instructions provided in this User's Manual thoroughly and save it for future experience.

**WARNING** - To reduce the risk of fire or electric shock:

install in accordance with the manufacturer's instructions

do not expose this apparatus to dripping and splashing

do not use this product near water

do not attempt to disassemble this unit

do not block any ventilation openings

do not install near any heat sources such as radiators, stoves or other equipments that produce heat.



You are cautioned that any changes or modifications not expressly mentioned in this manual could void your authority to operate this equipment.

This product has been designed and tested to provide reasonable protection against harmful interference in residential installation. However there is no guarantee that interference will not affect in a particular installation. In these cases, reorient the receiving antenna, try to increase the separation between the equipment and the source of interference and/or connect the equipment into an outlet on a circuit different from that to which the source of interference is connected.

The entire risk of the installation, use, results and performance are borne by you.

When used as a mechanism to disconnect from the current network, a socket plug, or a device connector; the disconnecting mechanism must be easily accessible at all times. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Only use attachments/accessories specified by the manufacturer.

Use a certified technician for installation, repair and/or maintenance of this equipment and comply with all the regulations in force in each country. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to dripping and splashing, does not operate normally, or has been dropped.

To change the batteries remove the cover pressing on the tab while lifting the cover. Use batteries type AAA 1.5V. Do not discard used batteries with household waste










## Table of Contents


<b>Quick Reference Guide</b> - - - - -	<b>2</b>
<b>1. Introduction</b> - - - - -	<b>3</b>
<b>2. General Operating Notes</b> - - - - -	<b>4</b>
<b>3. Operating Audio Functions</b> - - - - -	<b>5</b>
<b>4. Operating the FM Tuner</b> - - - - -	<b>6</b>
4.1 Station Search	
4.2 Directly Keying Station Frequency	
4.3 Tuning to FM Memory Pre-Sets	
4.4 Storing and Clearing Station Frequencies Manually	
4.5 Storing and Clearing Station Frequencies Automatically	
4.6 Adjusting StationSearch Sensitivity	
<b>5. Selecting Turn-On Mode</b> - - - - -	<b>9</b>
<b>6. "Ideal" mode</b> - - - - -	<b>10</b>
<b>7. Play your iPod® through KBSOUND®</b> - - - - -	<b>10</b>

## Technical Specifications


42696,42699,4269B	MIN	NORMAL	MAX	COMMENTS
Measurements		181x50x52		mm
Voltage	185	230	265	Vac
Consumption demand			10	W
Output signal (16 ohms)			1.5	W
Passband	20		15,000	Hz
Distortion		0,1	0,4	%
Frequency range	87,5		108	MHz
Antenna impedance		75		ohms
Antenna sensitivity		3,5	5	uV
Tuner distortion			2	%
Number of station pre-sets			30	

# Quick Reference Guide

- Automatic FM station search sensitivity  5
- Delete all FM tuning pre-sets  5
- Store all FM stations detected  5
- Delete FM tuning pre-set  5
- Store FM station pre-set  2
- Store "IDEAL" setting  2
- Store turn-on mode (on/off)  5

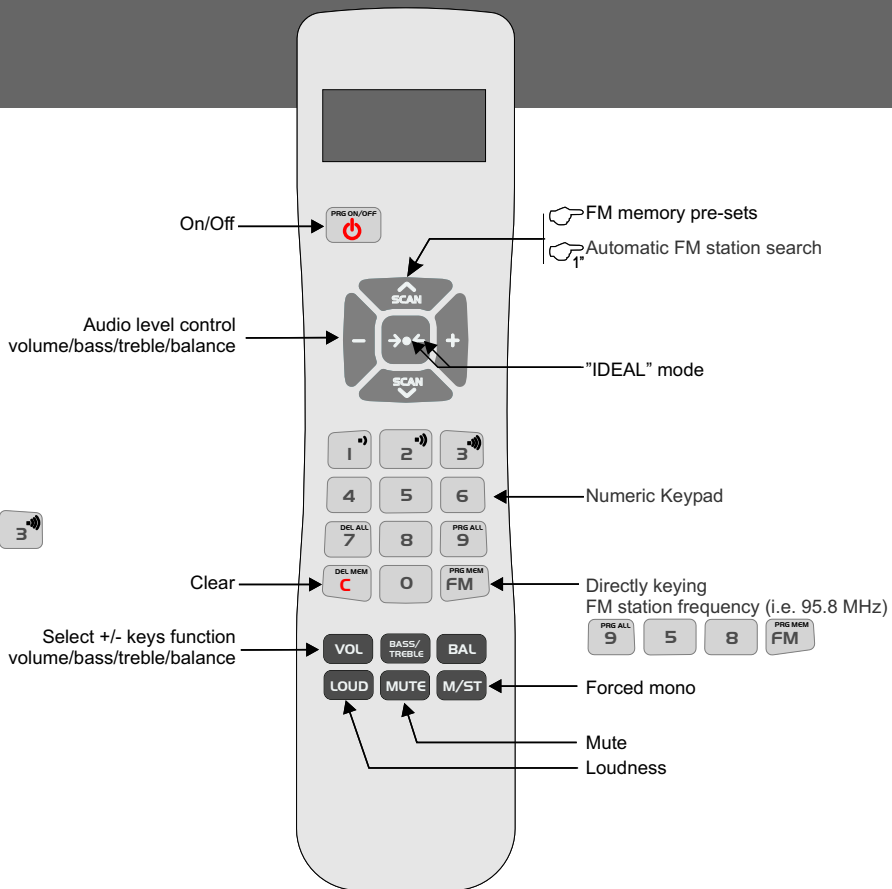

# 1. Introduction

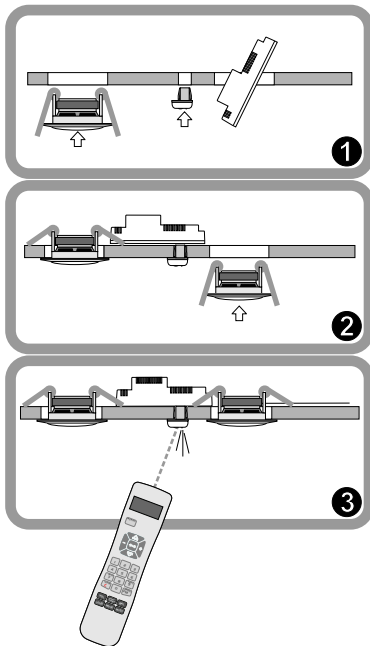

Introducing **KBSOUND®**, a sound device especially designed for easy and quick installation, without building work, cabling or pre-installations involved. Its four components (remote control, loudspeakers, electronic device, and IR capsule) provide an FM tuner that perfectly blends into the kitchen or bathroom décor installed in the furnishings.

Its operation is simple and easy by using a remote control unit with a display screen. The screen displays constant information about the state of the sound device installed in the ceiling, such as station frequency tuned, volume, bass, treble, etc.

Blending perfectly into the décor of the kitchen or bathroom, the **KBSOUND®** kit provides the following features:


- Remote control:
  - ▶ Display screen that visualizes the functions
  - ▶ Volume, bass, treble and balance control
  - ▶ 'Forced Mono' function
  - ▶ Ability to directly key in desired station frequency
  - ▶ Ability to automatically store into memory stations received with the best quality
  - ▶ 30 memory pre-sets
  - ▶ "Intelligent" loudness: automatic adjustment to the signal volume
- IR receiver/transmitter
- Loudspeakers
- 1.5W+1.5W power
- Sound device with built-in FM tuner (does not require an external power supply)


The components supplied in this kit are for installation and use in the manner and for the purpose described in the installation manual and the user manual. The installation must also comply with each country's current regulations. This manual assumes that the **KBSOUND®** unit has been correctly installed and is fully operational. If the device has not been installed yet, follow the instructions provided in the Installation Sheet included in this kit.


## 2. General Operating Notes


- 1.- None of the functions (except ON/OFF) work unless the remote control is in "on" mode.
- 2.- Functions pertaining to operating the audio signal only work when "mute" is cancelled.
- 3.- Once the KBSOUND® is connected to the mains, it will remain powered even it is in OFF state. That means that the OFF state (as indicated in this manual) really means a "standby" state


4.- A short BEEP sound signal indicates that the data was received  BIP

5.- The remote control unit exchanges information (transmits and receives data) by means of the transmission-reception capsule. If at any time there is a failure in the synchronicity of communication, the screen will display the  symbol. In the event of this occurring, point the remote control to the transmission-reception capsule at a straight-line distance of no greater than 5 meters.

6.- The remote control display will automatically turn off when there has been no keying activity for more than a few seconds, ensuring more efficient battery usage. To view the display information at any time, point the remote control to the transmission-reception capsule and press the  key.

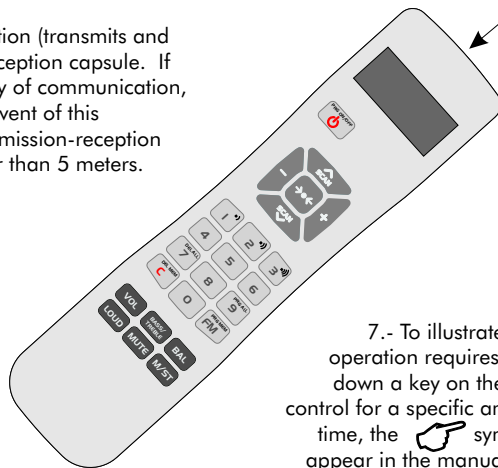

7.- To illustrate that an operation requires holding down a key on the remote control for a specific amount of time, the  symbol will appear in the manual next to the key.

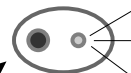

5m

The KBSOUND® will turn on with the audio and station frequency settings saved as "ideal" mode settings (see chapters 5 and 6) when the unit is connected to a power supply.

When switched off and on while connected to the power supply, the audio and station frequency settings will be as when the unit was switched off with the remote control ON/OFF key

### 3. Operating Audio Functions

ENG

If the control unit is off, a brief press on the **ON/OFF key** will gradually turn on the unit (between 1 and 2 seconds).

The LED will display the word "ON"

When the control unit is off, the LED will be OFF.

**Increase/decrease in the signal volume:** The LED will flash to indicate the desired change in volume.






 

 

 


**Increase/decrease in bass/treble levels:** The LED will flash to indicate the desired change in the bass/treble levels.

**Mute:** the unit becomes silent (mute activated)

**Loudness:** It reinforces the bass level in terms of the signal volume, assuming a greater backing at a lower volume and a lesser backing at a higher volume.

**Mono/stereo reception:** When activated, this feature allows the FM stations to be received in stereo. When cleared, this feature only allows for mono reception.

Note: If the control unit's configuration is mono (see Installation Sheet supplied with this kit), the signal will always be received in mono even if the signal received by the antenna is in stereo.

Key Sequence	Display
	ON 
	VOL 58 
	BAS+06 
	MUTE 
	LD ON 
	STEREO 

## 4. Operating the FM Tuner

### 4.1 Station Search

While the search is taking place, the word “SCAN” will appear on the display screen. The screen will duly display the station frequency of the next station located.

### 4.2 Directly Keying Station Frequency












To directly key in an FM station frequency, sequentially press the numeric keys of the station frequency then press the FM key. For example, to select 94.7, press 9 4 7 FM.

Note: A station frequency can be keyed in as either 94.7 (9 4 7 FM)  
or as 94.70 (9 4 7 0 FM)

If the frequency keyed in is not correct or if more digits than necessary are keyed in, the screen will display the word “ERROR”

To clear a digit keyed in and start keying in a different frequency, press the C key

and then begin keying in the desired frequency

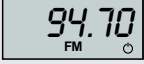Key Sequence	Display
	
	
	
	
	
	

### 4.3 Tuning to FM Memory Pre-Sets

The SCAN keys allow you to scroll through the stations stored in memory (see Chapters 2.6 and 2.7, Storing and Clearing Stations in Memory).

When stations are stored in memory they are sorted in ascending order; that is, beginning with 87.5 and ending with 108.0.

The screen will display the frequency of the station saved to that memory pre-set.

If there are no stations stored in memory, the screen will display the word "NO MEM"

### 4.4 Storing and Clearing Station Frequencies Manually

To store a station in memory, tune to the station (see Chapters 4.1. Station Search and 4.2. Directly Keying Station Frequency).


 



 








Hold down the FM key for 2".

The station tuned at that time will be stored in the memory.

If all the memory slots have been assigned, the current station will not be able to be stored and the screen will display the word "NO MEM"

To delete a station from memory, select the station and hold down the C key for 2". The station tuned at that time will be cleared from memory if it was previously stored.

If the station is not stored in memory, the screen will display the word "NO MEM"

Key Sequence	Display
	MEM 19 
	102.50 FM 
   	94.70 FM 
	MEM 07 
	94.70 FM 
	DEL OK 



## 4.5 Storing and Clearing Station Frequencies Automatically

To activate the *storing station frequencies automatically* process, hold down key 9 for 5".

When the automatic programming begins the screen will display the word "AUTO" .

The control unit will store into memory the stations that are received with the highest quality, ordered from lowest frequency (87.5 MHz) to highest frequency (108.0 MHz).

 

 

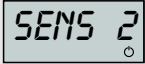
 
The system will use all the memory slots available, reaching the maximum of 30.

The process can take a few moments. Once the scan has been completed or once the maximum number of memory slots has been used, the process ends and a BEEP signal sounds.


To activate the *clearing station frequencies automatically* process for all the memory slots, hold down 7 key for 5".

## 4.6 Adjusting Station Search Sensitivity

To adjust the automatic station search sensitivity (see 4.1. Station Search), hold down the 1 and 3 keys (1=minimum, 3= maximum) for 5"

Key Sequence	Display
 	
	
 	
 	
 	
 	

## 5. Selecting Turn-On Mode

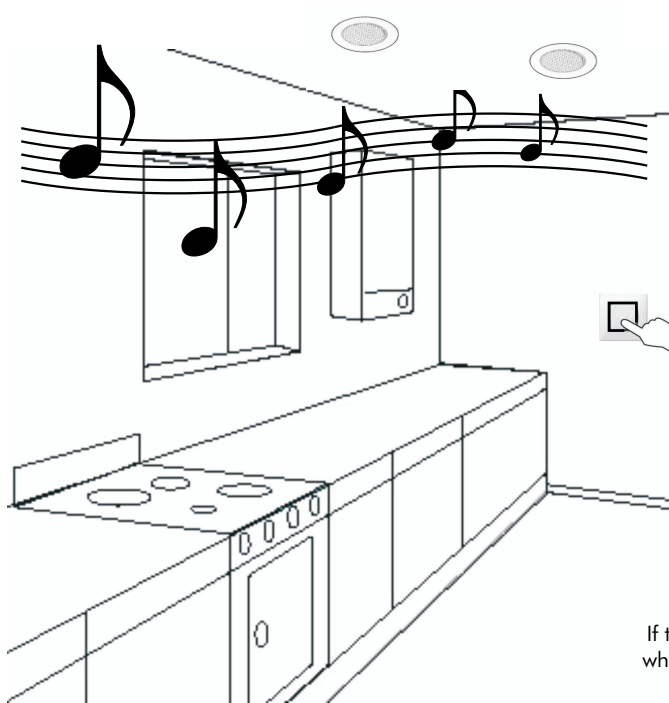





This function is designed for use in the event that the KBSOUND® power supply is fed by a specifically designated switch. In this case, the automatic activation mode must be programmed in order to automatically turn on the KBSOUND® unit when the switch is activated.

These steps must be followed:

1. Supply power to the KBSOUND® unit by flicking the switch. The KBSOUND® unit will flicker a couple of times and turn off.
2. Turn on the KBSOUND® unit using the remote control (ON/OFF key).
3. With the KBSOUND® unit turned on, keep the ON/OFF key pressed down for 5".

If the Turn-On mode is set to "on" in this state, when power is fed to the unit, it will turn on in "ideal" mode (see Chapter 6. "Ideal Mode").






If the Turn-On mode is set to "off", when power is fed to the unit, it will turn on in "off" mode.

Key Sequence	Display
	
	

## 6. "Ideal" mode

The "IDEAL" mode of operation can be instantly accessed by pressing the IDEAL key on the remote control. In this mode, a specific station is played at particular levels of volume, bass, treble and loudness.

To program your "IDEAL" mode of operation, select the desired levels of volume, bass, treble and loudness, as well as the station frequency. Then hold down the IDEAL key for 2"


Key Sequence	Display
	
 	

## 7. Play your iPod through kit KBSOUND®

1. Select an FM frequency on your kit KBSOUND®. Dial a numeric frequency (see Chapter 4.2) on which you hear nothing but static noise with no audio in the background nor any of the neighboring frequencies.

2. Select the same FM frequency using your iTrip® or any other FM transmitter

3. From the iPod® or any other MP3 player you can change the track, album, artist, etc. anywhere in the room. No additional wires needed.

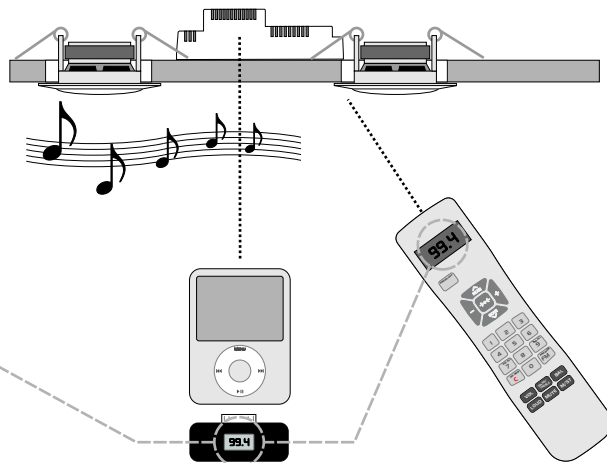

Electrónica Integral de Sonido, S.A. reserves the right to make changes without prior notice. Electrónica Integral de Sonido, S.A. is not responsible for any errors or omissions that may appear in this manual.

Electrónica Integral de Sonido S.A. se réserve le droit d'introduire des changements sans avertissement préalable. Electrónica Integral de Sonido S.A. ne se responsabilise pas des erreurs ou des omissions de ce manuel.

Electrónica Integral de Sonido, S.A. si riserva il diritto di apportare delle modifiche senza previo avviso. Electrónica Integral de Sonido, S.A. non è responsabile degli errori od omissioni di questo manuale.

Electrónica Integral de Sonido S.A. behält sich das Recht auf Änderungen ohne Ankündigung vor. Electrónica Integral de sonido, S.A. übernimmt keine Verantwortung für Fehler oder Auslassungen in diesem Handbuch.

Electrónica Integral de Sonido S.A. behoudt zich het recht voor zonder voorafgaande kennisgeving wijzigingen aan te brengen. Electrónica Integral de Sonido S.A. wijst alle aansprakelijkheid voor evt. fouten of veronachtzamingen in deze handleiding van de hand.

Electrónica Integral de Sonido, S.A. forbeholder seg retten til å foreta endringer uten forvarsel. Electrónica Integral de Sonido, S.A. er ikke ansvarlig for eventuelle feil eller utelatelser som kan forekomme i denne håndboken.

**CC-1119-04**  
64460035

#### **CENTRAL**

Polígono Malpica Calle F Oeste  
Grupo Gregorio Quejido, 87-88  
50016 Zaragoza (SPAIN)  
Tel.: 34 976 465 550  
Fax: 34 976 465 559  
**comercial@eissound.com**

#### **MADRID**

Poeta Rafael Morales 2, of.2ºB  
28703 San Sebastián de los Reyes  
Madrid (SPAIN)  
Tel.: 34 91 659 3678  
Fax: 34 91 623 9525  
**delegacionmadrid@eissound.com**

**www.eissound.com**



# eISSOUND

*It's Soundlife!*